



HYDRAULIC STRUT SPREADER ASSEMBLY

HYDRAULIC STRUT SPREADER PARTS

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
HS-001	RETURN SPRING CLIP	HS-RS-XXXX	RETURN SPRING
HS-002	HEX NUT	HS-SPACER	END SPACER
HS-003	BOLT	2-CYL-XXXX-HS	HYDRAULIC STRUT CYLINDER
HS-004	WASHER		
HS-DS-XXXX	STEEL OUTER SLEEVE		
HS-IS-XXXX	STEEL INNER SLEEVE		

XXXX = MODEL NUMBER

